

Operating Instructions

Pressure sensor with metallic measuring cell

VEGABAR 29

Two-wire 4 ... 20 mA



Document ID: 57087



VEGA

Contents

| | | |
|-----------|--|-----------|
| 1 | About this document | 4 |
| 1.1 | Function | 4 |
| 1.2 | Target group | 4 |
| 1.3 | Symbols used..... | 4 |
| 2 | For your safety | 5 |
| 2.1 | Authorised personnel | 5 |
| 2.2 | Appropriate use..... | 5 |
| 2.3 | Warning about incorrect use..... | 5 |
| 2.4 | General safety instructions | 5 |
| 2.5 | EU conformity..... | 6 |
| 2.6 | Installation and operation in the USA and Canada | 6 |
| 2.7 | Sicherheitshinweise für Ex-Bereiche | 6 |
| 3 | Product description | 7 |
| 3.1 | Configuration..... | 7 |
| 3.2 | Principle of operation..... | 9 |
| 3.3 | Adjustment | 11 |
| 3.4 | Packaging, transport and storage..... | 11 |
| 3.5 | Accessories..... | 12 |
| 4 | Mounting..... | 13 |
| 4.1 | General instructions | 13 |
| 4.2 | Process pressure measurement..... | 15 |
| 4.3 | Level measurement..... | 17 |
| 5 | Connecting to power supply..... | 18 |
| 5.1 | Preparing the connection | 18 |
| 5.2 | Connection procedure..... | 18 |
| 5.3 | Wiring plan | 21 |
| 5.4 | Switch-on phase..... | 22 |
| 6 | Access protection | 23 |
| 6.1 | Bluetooth radio interface | 23 |
| 6.2 | Protection of the parameterization..... | 23 |
| 7 | Setup with smartphone/tablet (Bluetooth)..... | 25 |
| 7.1 | Preparations..... | 25 |
| 7.2 | Connecting..... | 25 |
| 7.3 | Sensor parameter adjustment | 26 |
| 8 | Setup with PC/notebook (Bluetooth)..... | 27 |
| 8.1 | Preparations..... | 27 |
| 8.2 | Connecting..... | 27 |
| 8.3 | Parameter adjustment | 28 |
| 9 | Menu overview | 29 |
| 10 | Diagnostics and servicing | 30 |
| 10.1 | Maintenance | 30 |
| 10.2 | Rectify faults..... | 30 |
| 10.3 | Diagnosis, fault messages | 31 |
| 10.4 | Status messages according to NE 107 | 31 |

10.5 Software update 33

10.6 How to proceed if a repair is necessary 33

11 Dismount..... 34

11.1 Dismounting steps..... 34

11.2 Disposal 34

12 Certificates and approvals 35

12.1 Environmental instructions 35

13 Supplement 36

13.1 Technical data 36

13.2 Dimensions 43

13.3 Industrial property rights..... 48

13.4 Hash function acc. to mbed TLS..... 48

13.5 Trademark 48

1 About this document

1.1 Function

This instruction provides all the information you need for mounting, connection and setup as well as important instructions for maintenance, fault rectification, the exchange of parts and the safety of the user. Please read this information before putting the instrument into operation and keep this manual accessible in the immediate vicinity of the device.

1.2 Target group

This operating instructions manual is directed to trained personnel. The contents of this manual must be made available to the qualified personnel and implemented.

1.3 Symbols used



Document ID

This symbol on the front page of this instruction refers to the Document ID. By entering the Document ID on www.vega.com you will reach the document download.



Information, note, tip: This symbol indicates helpful additional information and tips for successful work.



Note: This symbol indicates notes to prevent failures, malfunctions, damage to devices or plants.



Caution: Non-observance of the information marked with this symbol may result in personal injury.



Warning: Non-observance of the information marked with this symbol may result in serious or fatal personal injury.



Danger: Non-observance of the information marked with this symbol results in serious or fatal personal injury.



Ex applications

This symbol indicates special instructions for Ex applications.



List

The dot set in front indicates a list with no implied sequence.



Sequence of actions

Numbers set in front indicate successive steps in a procedure.



Battery disposal

This symbol indicates special information about the disposal of batteries and accumulators.

2 For your safety

2.1 Authorised personnel

All operations described in this documentation must be carried out only by trained, qualified personnel authorised by the plant operator.

During work on and with the device, the required personal protective equipment must always be worn.

2.2 Appropriate use

The VEGABAR 29 is a pressure transmitter for process pressure and hydrostatic level measurement.

You can find detailed information about the area of application in chapter "*Product description*".

Operational reliability is ensured only if the instrument is properly used according to the specifications in the operating instructions manual as well as possible supplementary instructions.

2.3 Warning about incorrect use

Inappropriate or incorrect use of this product can give rise to application-specific hazards, e.g. vessel overfill through incorrect mounting or adjustment. Damage to property and persons or environmental contamination can result. Also, the protective characteristics of the instrument can be impaired.

2.4 General safety instructions

This is a state-of-the-art instrument complying with all prevailing regulations and directives. The instrument must only be operated in a technically flawless and reliable condition. The operator is responsible for the trouble-free operation of the instrument. When measuring aggressive or corrosive media that can cause a dangerous situation if the instrument malfunctions, the operator has to implement suitable measures to make sure the instrument is functioning properly.

During the entire duration of use, the user is obliged to determine the compliance of the necessary occupational safety measures with the current valid rules and regulations and also take note of new regulations.

The safety instructions in this operating instructions manual, the national installation standards as well as the valid safety regulations and accident prevention rules must be observed by the user.

For safety and warranty reasons, any invasive work on the device beyond that described in the operating instructions manual may be carried out only by personnel authorised by the manufacturer. Arbitrary conversions or modifications are explicitly forbidden. For safety reasons, only the accessory specified by the manufacturer must be used.

To avoid any danger, the safety approval markings and safety tips on the device must also be observed.

2.5 EU conformity

The device fulfils the legal requirements of the applicable EU directives. By affixing the CE marking, we confirm the conformity of the instrument with these directives.

The EU conformity declaration can be found on our homepage.

Due to the design of its process fittings, the device does not subject of EU pressure device directive if it is operated at process pressures ≤ 200 bar.¹⁾

2.6 Installation and operation in the USA and Canada

This information is only valid for USA and Canada. Hence the following text is only available in the English language.

Installations in the US shall comply with the relevant requirements of the National Electrical Code (ANSI/NFPA 70).

Installations in Canada shall comply with the relevant requirements of the Canadian Electrical Code.

2.7 Sicherheitshinweise für Ex-Bereiche

Bei Ex-Anwendungen dürfen nur Geräte mit entsprechender Ex-Zulassung eingesetzt werden. Beachten Sie dabei die Ex-spezifischen Sicherheitshinweise. Diese sind Bestandteil der Betriebsanleitung und liegen jedem Gerät mit Ex-Zulassung bei.

¹⁾ Exception: Versions with measuring ranges 250 bar, 600 bar, 1000 bar. These are subject of the EU Pressure Device Directive.

3 Product description

3.1 Configuration

Scope of delivery

The scope of delivery encompasses:

- VEGABAR 29 pressure transmitter
- Information sheet "*Documents and software*" with:
 - Instrument serial number
 - QR code with link for direct scanning
- Information sheet "*PINs and Codes*" with:
 - Bluetooth access code
 - DataMatrix code with link for direct scanning
- Information sheet "*Emergency unlock codes*" with:
 - Bluetooth access code
 - Bluetooth unlock code
 - Device unlock code

The further scope of delivery encompasses:

- Documentation
 - Ex-specific "*Safety instructions*" (with Ex versions)
 - If necessary, further certificates



Note:

Optional instrument features are also described in this operating instructions manual. The respective scope of delivery results from the order specification.

Scope of this operating instructions

This operating instructions manual applies to the following instrument versions:

- Hardware version from 1.0.0
- Software version from 1.1.0

Constituent parts

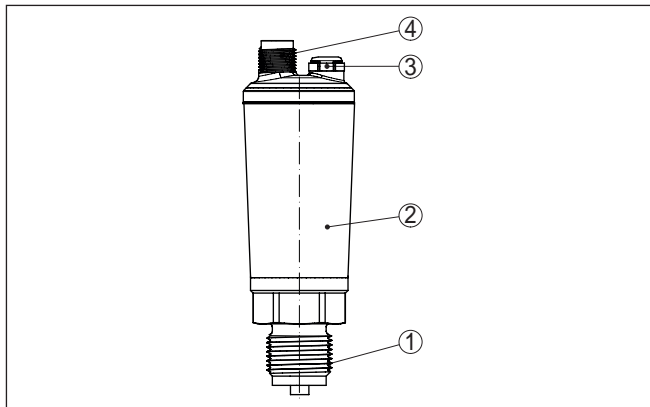


Fig. 1: Components of VEGABAR 29

- 1 Process fitting
- 2 Electronics housing
- 3 Ventilation/pressure compensation
- 4 Plug connector

Type label

The type label contains the most important data for identification and use of the instrument.

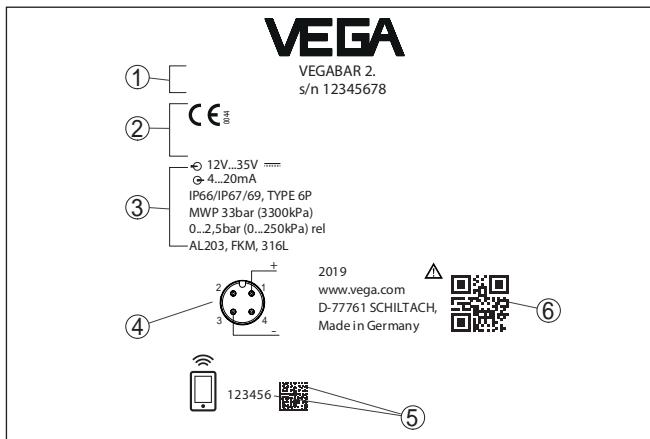


Fig. 2: Layout of the type label (example)

- 1 Sensor type and serial number
- 2 Field for approvals
- 3 Technical data
- 4 Assignment
- 5 Number or DataMatrix code for Bluetooth access
- 6 QR code for device documentation

Documents and software

Move to "www.vega.com" and enter in the search field the serial number of your instrument.

There you can find the following information about the instrument:

- Order data
- Documentation
- Software

Alternatively, you can find all via your smartphone:

- Scan the QR-code on the type label of the device or
- Enter serial number manually in the VEGA Tools app (available free of charge in the respective stores)

3.2 Principle of operation

Application area

VEGABAR 29 is suitable for applications in virtually all industries. It is used for the measurement of the following pressure types.

- Gauge pressure
- Absolute pressure
- Vacuum

Measured products

Measured products are gases, vapours and liquids.

The device is especially suitable for applications with higher temperatures and high pressures.

Measured variables

The VEGABAR 29 is suitable for the measurement of the following process variables:

- Process pressure
- Level

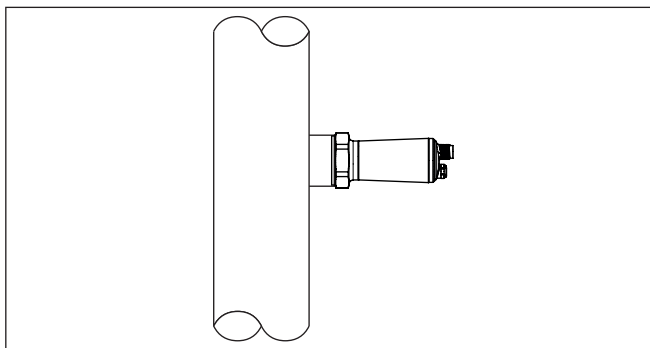


Fig. 3: Process pressure measurement VEGABAR 29

Measuring system

The process pressure acts on the sensor element via the process diaphragm. The process pressure causes a resistance change which is converted into a corresponding output signal and output as measured value.

Piezoresistive sensor element

Measuring ranges up to 100 bar: piezoresistive sensor element with internal transmission liquid is used.

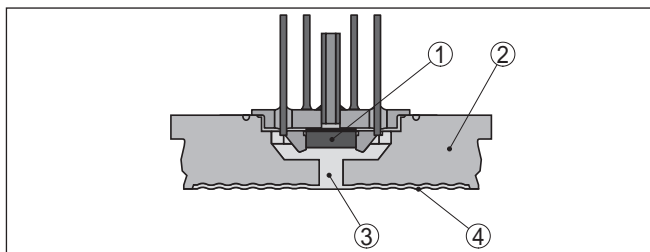


Fig. 4: Configuration of the measuring system with piezoresistive sensor element

- 1 Sensor element
- 2 Base element
- 3 Transmission liquid
- 4 Process diaphragm

Strain gauge (DMS) sensor element

For measuring ranges above 250 bar, a strain gauge (DMS) sensor element (dry system) is used.

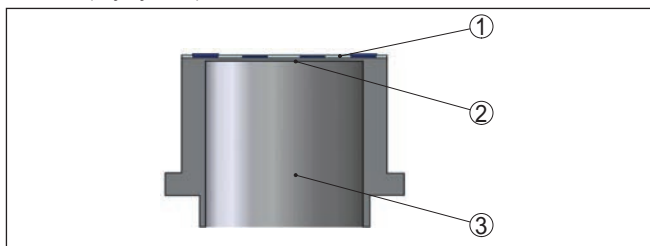


Fig. 5: Configuration of the measuring system with strain gauge (DMS) sensor element

- 1 Sensor element
- 2 Process diaphragm
- 3 Pressure cylinder

Pressure types

Relative pressure: the measuring cell is open to the atmosphere. The ambient pressure is detected in the measuring cell and compensated. It thus has no influence on the measured value.

Absolute pressure: the measuring cell contains vacuum and is encapsulated. The ambient pressure is not compensated and does hence influence the measured value.

Seal concept

The measuring system is completely welded and thus sealed against the process.

The process fitting is sealed against the process by a suitable seal. It must be provided by the customer, depending on the process fitting also included in the scope of delivery, see chapter "Technical data", "Materials and weights".

Wireless adjustment

3.3 Adjustment

Devices with integrated Bluetooth module can be adjusted wirelessly via standard adjustment tools:

- Smartphone/tablet (iOS or Android operating system)
- PC/notebook (Windows operating system)

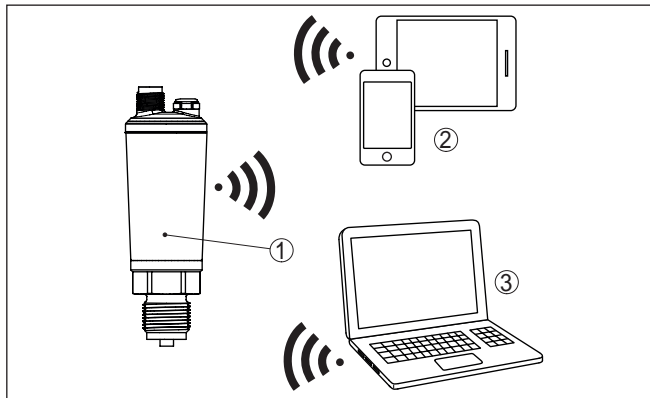


Fig. 6: Wireless connection to standard operating devices with integrated Bluetooth LE

- 1 Sensor
- 2 Smartphone/Tablet
- 3 Bluetooth USB adapter

Packaging

3.4 Packaging, transport and storage

Your instrument was protected by packaging during transport. Its capacity to handle normal loads during transport is assured by a test based on ISO 4180.

The packaging consists of environment-friendly, recyclable cardboard. For special versions, PE foam or PE foil is also used. Dispose of the packaging material via specialised recycling companies.

Transport

Transport must be carried out in due consideration of the notes on the transport packaging. Nonobservance of these instructions can cause damage to the device.

Transport inspection

The delivery must be checked for completeness and possible transit damage immediately at receipt. Ascertained transit damage or concealed defects must be appropriately dealt with.

Storage

Up to the time of installation, the packages must be left closed and stored according to the orientation and storage markings on the outside.

Unless otherwise indicated, the packages must be stored only under the following conditions:

- Not in the open
- Dry and dust free

- Not exposed to corrosive media
- Protected against solar radiation
- Avoiding mechanical shock and vibration

Storage and transport temperature

The permissible storage and transport temperatures can be found in chapter "*Supplement - Technical data - Ambient conditions*"

3.5 Accessories

The instructions for the listed accessories can be found in the download area on our homepage.

Welded sockets and adapters

Welded sockets are used to connect the sensors to the process.

Threaded adapters enable simple adaptation of sensors with standard threaded fittings, e.g. to process-side hygiene connections.

Mounting accessories

The suitable mounting accessories for VEGABAR 29 includes si-phons, blocking valves and measuring instrument holders.

4 Mounting

4.1 General instructions

Ambient conditions

The instrument is suitable for standard and extended ambient conditions acc. to DIN/EN/IEC/ANSI/ISA/UL/CSA 61010-1. It can be used indoors as well as outdoors.

Process conditions



Note:

For safety reasons, the instrument must only be operated within the permissible process conditions. You can find detailed information on the process conditions in chapter "*Technical data*" of the operating instructions or on the type label.

Hence make sure before mounting that all parts of the instrument exposed to the process are suitable for the existing process conditions.

These are mainly:

- Active measuring component
- Process fitting
- Process seal

Process conditions in particular are:

- Process pressure
- Process temperature
- Chemical properties of the medium
- Abrasion and mechanical influences

Permissible process pressure (MWP)

The permissible process pressure range is specified by "MWP" (Maximum Working Pressure) on the type label, see chapter "*Structure*". The MWP takes the element of the measuring cell and processing fitting combination with the weakest pressure into consideration and may applied permanently. The specification refers to a reference temperature of +20 °C (+68 °F). It also applies when a measuring cell with a higher measuring range than the permissible pressure range of the process fitting is installed order-related.

In order to prevent damage to the device, the test pressure may only exceed the specified MWP briefly by 1.5 times at reference temperature. The pressure stage of the process fitting as well as the overload resistance of the measuring cell are taken into consideration here (see chapter "*Technical Data*").

In addition, a temperature derating of the process fitting, e. g. with flanges, can limit the permissible process pressure range according to the respective standard.

Protection against moisture

Protect your instrument against moisture ingress through the following measures:

- Use a suitable connection cable (see chapter "*Connecting to power supply*")
- Tighten the cable gland or plug connector
- Lead the connection cable downward in front of the cable entry or plug connector

This applies mainly to outdoor installations, in areas where high humidity is expected (e.g. through cleaning processes) and on cooled or heated vessels.

Make sure that the degree of contamination specified in chapter "*Technical data*" meets the existing ambient conditions.

Ventilation and pressure compensation

Ventilation and pressure compensation for VEGABAR 29 are provided by an air-permeable, moisture-blocking filter element.

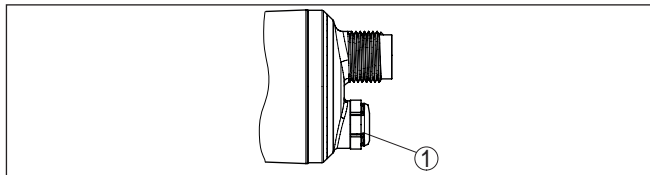


Fig. 7: Position of the filter element

1 Filter element

For effective ventilation, the filter element must always be free of buildup.

Screwing in

On devices with a threaded fitting, the hexagon on the process fitting must be tightened with a suitable wrench.

See chapter "*Dimensions*" for wrench size.



Warning:

The housing or the electrical connection may not be used for screwing in! Depending on the device version, tightening can cause damage, e. g. to the rotation mechanism of the housing.

Process pressure range - Mounting accessory

The permissible process pressure range is stated on the type label. The instrument should only be operated with these pressures if the mounting accessory used also fulfils these values. This should be ensured by suitable flanges, welded sockets, tension rings with Clamp connections, sealings, etc.

Temperature limits

Higher process temperatures often mean also higher ambient temperatures. Make sure that the upper temperature limits stated in chapter "*Technical data*" for the environment of the electronics housing and connection cable are not exceeded.

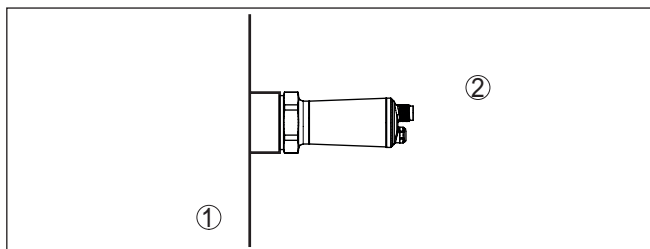


Fig. 8: Temperature ranges

- 1 Process temperature
- 2 Ambient temperature

4.2 Process pressure measurement

In gases

Keep the following in mind when setting up the measuring system:

- Mount the instrument above the measuring point

Possible condensation can then drain off into the process line.

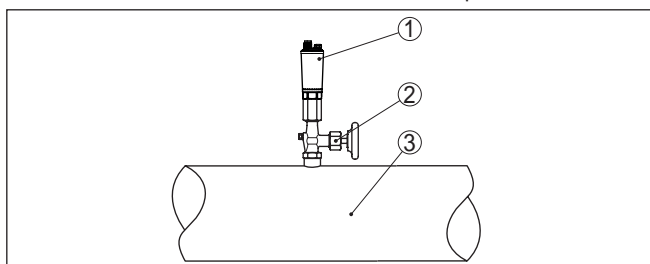


Fig. 9: Measurement setup for process pressure measurement of gases in pipelines

- 1 VEGABAR 29
- 2 Blocking valve
- 3 Pipeline

In vapours

Keep the following in mind when setting up the measuring system:

- Connect via a siphon

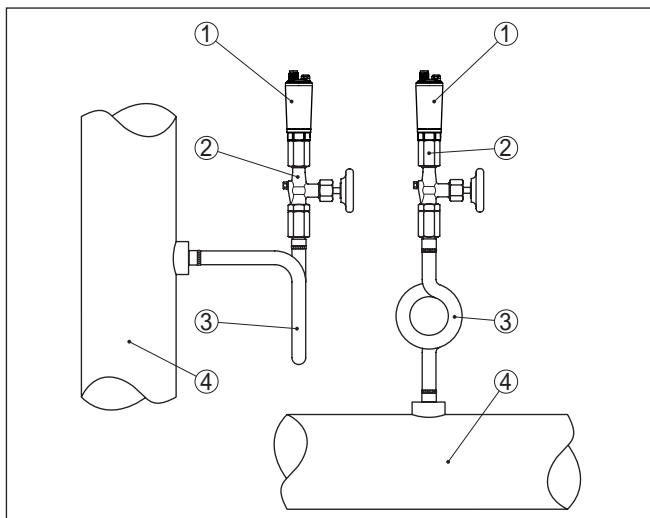


Fig. 10: Measurement setup for process pressure measurement of gases in pipelines

- 1 VEGABAR 29
- 2 Blocking valve
- 3 Siphon in U or circular form
- 4 Pipeline

A protective accumulation of water is formed through condensation in the pipe bends. Even in applications with hot steam, a medium temperature $< 100\text{ }^{\circ}\text{C}$ on the transmitter is ensured.

In liquids

Keep the following in mind when setting up the measuring system:

- Mount the instrument below the measuring point

The effective pressure line is always filled with liquid and gas bubbles can bubble up to the process line.

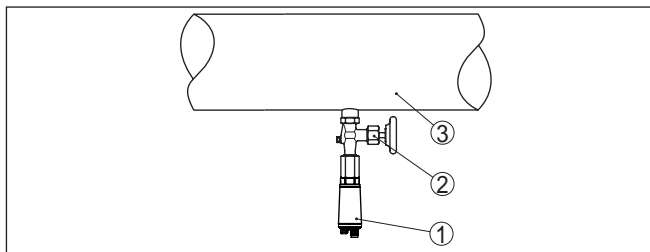


Fig. 11: Measurement setup for process pressure measurement of liquids in pipelines

- 1 VEGABAR 29
- 2 Blocking valve
- 3 Pipeline

Measurement setup**4.3 Level measurement**

Keep the following in mind when setting up the measuring system:

- Mount the instrument below the min. level
- Do not mount the instrument close to the filling stream or emptying area
- Mount the instrument so that it is protected against pressure shocks from the stirrer

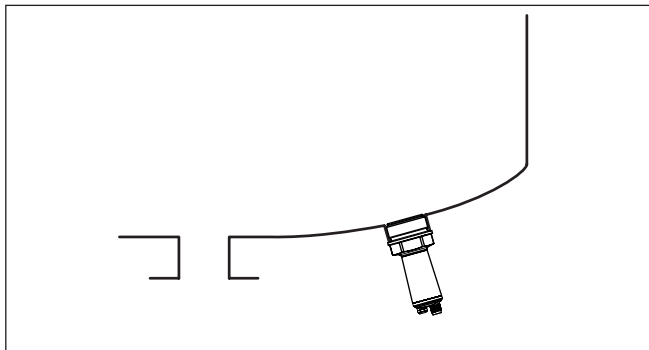


Fig. 12: Measurement setup for level measurement

5 Connecting to power supply

5.1 Preparing the connection

Safety instructions

Always keep in mind the following safety instructions:

- Carry out electrical connection by trained, qualified personnel authorised by the plant operator
- If overvoltage surges are expected, overvoltage arresters should be installed



Warning:

Only connect or disconnect in de-energized state.

Voltage supply

The data for power supply are specified in chapter "*Technical data*".



Note:

Power the instrument via an energy-limited circuit (power max. 100 W) acc. to IEC 61010-1, e.g.

- Class 2 power supply unit (acc. to UL1310)
- SELV power supply unit (safety extra-low voltage) with suitable internal or external limitation of the output current

Keep in mind the following additional factors that influence the operating voltage:

- Lower output voltage of the power supply unit under nominal load (e.g. with a sensor current of 20.5 mA or 22 mA in case of fault)
- Influence of additional instruments in the circuit (see load values in chapter "*Technical data*")

Connection cable

Use cable with round cross section. Depending on the plug connection, you have to select the outer diameter of the cable respectively so that the seal effect of the cable gland is ensured.

Depending on the connection method or signal output, the device is connected with standard two, three or four-wire cable without shielding.

5.2 Connection procedure

M12 x 1 plug

This plug connection requires a complete confectioned cable with counter plug.

Plug according to ISO 4400

Proceed as follows:

1. Loosen the screw on the rear of the plug connector
2. Remove the plug connector and seal from VEGABAR 29
3. Remove the plug insert from the plug housing

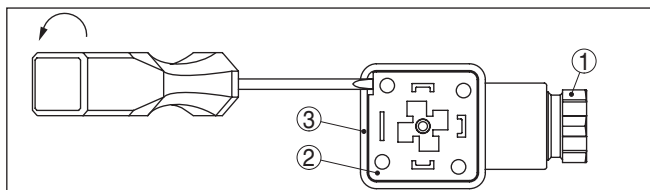


Fig. 13: Loosen the plug insert

- 1 Cable gland
- 2 Plug insert
- 3 Plug housing

- 4. Remove approx. 5 cm of the cable mantle, strip approx. 1 cm insulation from the individual wires
- 5. Lead the cable through the cable gland into the plug housing
- 6. Connect the wire ends to the screw terminals according to the wiring plan

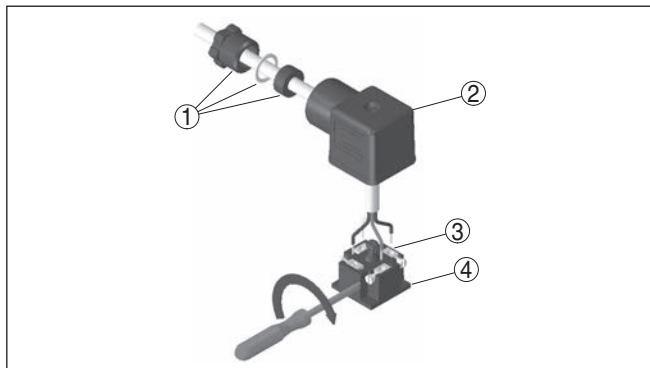


Fig. 14: Connection to the screw terminals

- 1 Cable gland
- 2 Plug housing
- 3 Plug insert
- 4 Plug seal

- 7. Snap the plug insert into the plug housing and insert the sensor seal
- 8. Plug the plug insert with seal to VEGABAR 29 and tighten the screw

The electrical connection is finished.

ISO 4400 plug with hinged cover

Proceed as follows:

- 1. Loosen the screw in the cover of the plug connector
- 2. Open the cover and remove it
- 3. Press the plug insert downwards
- 4. Loosen the screws of the strain relief and cable entry

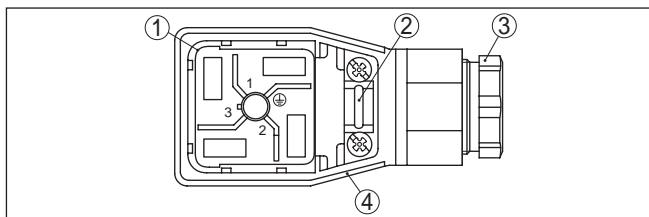


Fig. 15: Loosen the plug insert

- 1 Plug insert
- 2 Strain relief
- 3 Cable gland
- 4 Plug housing

5. Remove approx. 5 cm of the cable mantle, strip approx. 1 cm insulation from the individual wires
6. Lead the cable through the cable gland into the plug housing
7. Connect the wire ends to the screw terminals according to the wiring plan

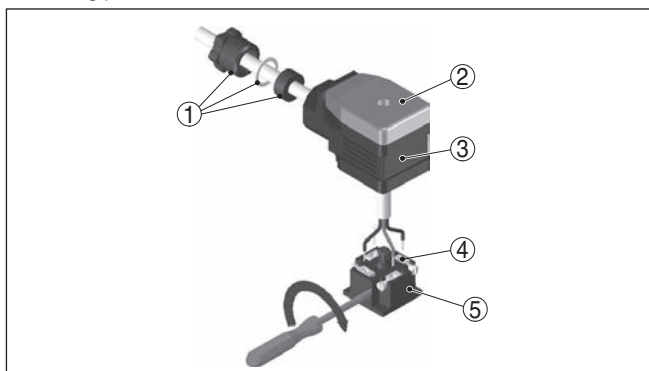


Fig. 16: Connection to the screw terminals

- 1 Cable gland
- 2 Cover
- 3 Plug housing
- 4 Plug insert
- 5 Plug seal

8. Snap the plug insert into the plug housing and insert the sensor seal

**Information:**

Note the correct arrangement, see illustration

9. Tighten the screws on the strain relief and cable entry
10. Hook in the cover and push onto the plug connection, tighten cover screw
11. Plug the plug insert with seal to VEGABAR 29 and tighten the screw

The electrical connection is finished.

Plug according to ISO 4400 with IDC method of termination

For this plug version you can use standard cable with round wire cross-section. The inner conductors do not have to be stripped. The plug connects the conductors automatically when screwing in. Cable diameter 5.5 ... 8 mm, protection IP67.

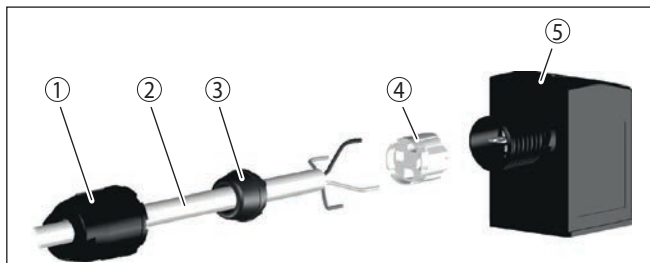


Fig. 17: Connection, valve plug ISO 4400 with IDC crimping technology

- 1 Compression nut
- 2 Cable
- 3 Seal ring
- 4 Terminal insert
- 5 Plug housing

5.3 Wiring plan

M12 x 1 plug

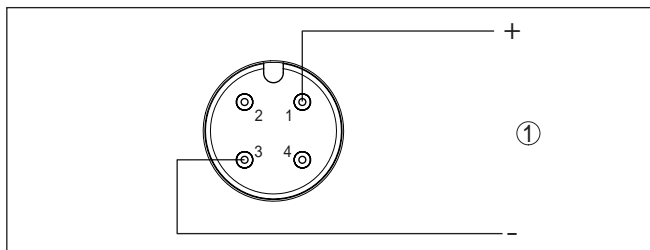


Fig. 18: Wiring plan - two-wire 4 ... 20 mA - M12 x 1 plug

- 1 Voltage supply and signal output

| Contact, plug connector | Function/Polarity |
|-------------------------|---------------------------------|
| 1 | Voltage supply, signal output/+ |
| 2 | Free |
| 3 | Voltage supply, signal output/- |
| 4 | Free |

Plug according to ISO 4400

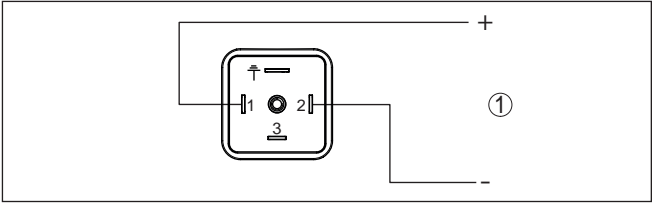



Fig. 19: Wiring plan - two-wire 4 ... 20 mA - plug according to ISO 4400
1 Voltage supply and signal output

| Contact, plug connector | Function/Polarity |
|---|---|
| 1 | Voltage supply, signal output/+ |
| 2 | Voltage supply, signal output/- |
| 3 | Free |
|  | Electrically connected with metal housing |

Direct cable outlet

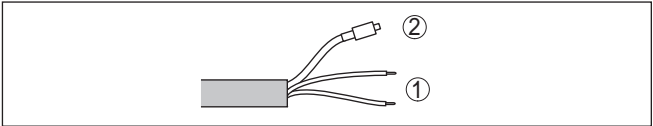


Fig. 20: Wiring plan - Two-wire 4 ... 20 mA - direct cable outlet
1 Voltage supply, signal output
2 Ventilation

| Wire colour | Function/Polarity |
|-------------|---------------------------------|
| Brown | Voltage supply, signal output/+ |
| Blue | Voltage supply, signal output/- |

5.4 Switch-on phase

After switching on, the device first carries out a self-check:

- Internal check of the electronics
- The output signal jumps to the set fault current

The current measured value is then output on the signal cable.

6 Access protection

6.1 Bluetooth radio interface

Devices with a Bluetooth radio interface are protected against unwanted access from outside. This means that only authorized persons can receive measured and status values and change device settings via this interface.

Bluetooth access code

A Bluetooth access code is required to establish Bluetooth communication via the adjustment tool (smartphone/tablet/notebook). This code must be entered once when Bluetooth communication is established for the first time in the operating device. It is then stored in the adjustment tool and does not have to be entered again.

The Bluetooth access code is individual for each device. It is printed on the device housing and is also supplied with the device in the information sheet "*PINs and Codes*". It can be changed by the user after the first connection has been established. If the Bluetooth access code has not been entered correctly, a new entry can only be made after a waiting period has elapsed. The waiting time increases with each additional incorrect entry.

If the user has a "myVEGA" account, the Bluetooth access code is additionally stored in his account under "*PINs and Codes*". This greatly simplifies the use of additional adjustment tools, as all Bluetooth access codes are automatically synchronized when connected to the "myVEGA" account

Emergency Bluetooth unlock code

The emergency Bluetooth unlock code enables Bluetooth communication to be established in the event that the Bluetooth access code is no longer known. It can't be changed. The "Emergency Bluetooth unlock code" can also be found in information sheet "*Emergency codes*". If this document is lost, the emergency Bluetooth unlock code can be retrieved from your VEGA contact person after legitimization. The storage and transmission of Bluetooth access codes is always encrypted (SHA 56 algorithm).

6.2 Protection of the parameterization

The settings (parameters) of the device can be protected against unwanted changes. The device is not locked on delivery, all settings can be made.

Device code

To protect the parameterization, the device can be locked by the user with the aid of a freely selectable device code. The settings (parameters) can then only be read out, but not changed. The device code is also stored in the adjustment tool. However, it must be re-entered for each unlocking. When using the VEGA Tools app, the stored device code is then suggested to the user for unlocking.

If the user has a "myVEGA" account, the device code is additionally stored in his account under "*PINs and Codes*". This greatly simplifies the setup of additional operating devices, as all device codes are automatically synchronized when connected to the "myVEGA" account.

Emergency device unlock code

The emergency device unlock code allows unlocking the devices in case the device code is no longer known. It can't be changed. The emergency device unlock code can also be found on the supplied information sheet "*Emergency codes*". If this document is lost, the emergency device unlock code can be retrieved from your VEGA contact person after legitimation. The storage and transmission of the device codes is always encrypted (SHA 256 algorithm).

7 Setup with smartphone/tablet (Bluetooth)

7.1 Preparations

System requirements

Make sure that your smartphone/tablet meets the following system requirements:

- Operating system: iOS 8 or newer
- Operating system: Android 4.3 or newer
- Bluetooth 4.0 LE or newer

Download the VEGA Tools app from the "Apple App Store", "Google Play Store" or "Baidu Store" to your smartphone or tablet.

7.2 Connecting

Connecting ...

Start the VEGA Tools app and select the function "Setup". The smartphone/tablet searches automatically for Bluetooth-capable instruments in the area.

The message "Searching ..." is displayed.

The devices found are listed and the search is automatically continued continuously.

Select the requested instrument in the device list.

Authenticate

For the first connection, the operating device and the sensor must authenticate each other. After successful authentication, the next connection functions without authentication.

iOS

During the pairing process, the following message is displayed: "Pairing request (Bluetooth), e.g. 12345678 wants to pair with your iPad/iPhone". Press "Pair".

Android

The coupling passes through automatically.

Enter Bluetooth access code

For authentication, enter the 6-digit Bluetooth access code in the next menu window or scan it via the bar code (DataMatrix). You can find the code on the outside of the device housing and on the information sheet "PINs and Codes" in the device packaging.

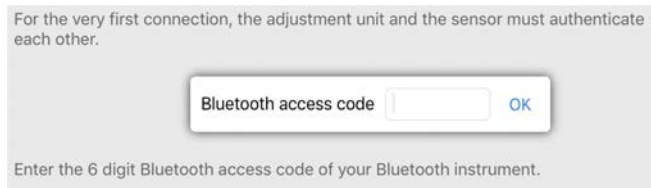


Fig. 21: Enter Bluetooth access code



Note:

If an incorrect code is entered, the code can only be entered again after a delay time. This time gets longer after each incorrect entry.

The message *"Waiting for authentication"* is displayed on the smartphone/tablet.

Connected

After connection, the sensor adjustment menu is displayed on the respective adjustment instrument.

If the Bluetooth connection is interrupted, e.g. due to a too large distance between the two devices, this is displayed on the operating device. The message disappears when the connection is restored.

Change device code

Parameter adjustment of the device is only possible if the parameter protection is deactivated. When delivered, parameter protection is deactivated by default and can be activated at any time.

It is recommended to enter a personal 6-digit device code. To do this, go to menu *"Extended functions"*, *"Access protection"*, menu item *"Protection of the parameter adjustment"*.

Enter parameters

7.3 Sensor parameter adjustment

The sensor adjustment menu is divided into two halves:

On the left you'll find the navigation section with the menus *"Setup"*, *"Display"*, *"Diagnosis"* and others.

The selected menu item, recognisable by the colour change, is displayed in the right half.

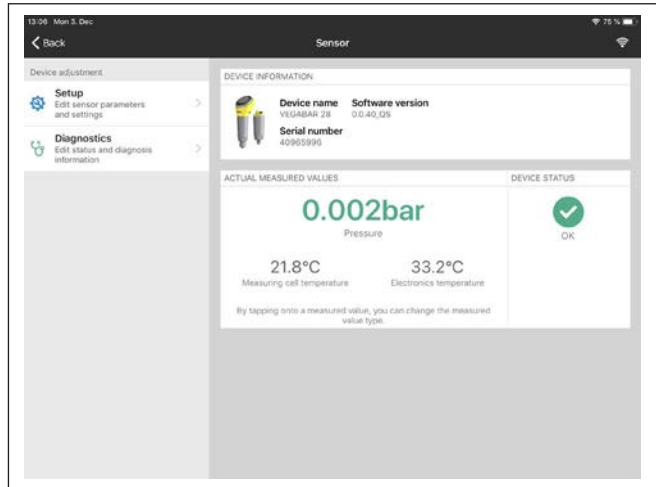


Fig. 22: Example of an app view - Setup sensor adjustment

8 Setup with PC/notebook (Bluetooth)

8.1 Preparations

System requirements

Make sure that your PC/notebook meets the following system requirements:

- Operating system Windows 10
- DTM Collection 12/2019 or newer
- Bluetooth 4.0 LE or newer

Activate Bluetooth connection

Activate the Bluetooth connection via the VEGA project assistant.



Note:

Older systems do not always have an integrated Bluetooth LE. In these cases, a Bluetooth USB adapter is required.

Activate the Bluetooth USB adapter via the VEGA project assistant (see supplementary instructions "Bluetooth USB adapter").

After activating the integrated Bluetooth or the Bluetooth USB adapter, devices with Bluetooth are found and created in the project tree.

8.2 Connecting

Connecting ...

Select the requested sensor for the online parameter adjustment in the project tree.

Authenticate

The window "Authentication" is displayed. For the first connection, the operating device and the sensor must authenticate each other. After successful authentication, the next connection functions without authentication.

Enter Bluetooth access code

For authentication, enter in the next menu window the 6-digit Bluetooth access code:

Fig. 23: Enter Bluetooth access code

You can find the code on the outside of the device housing and on the information sheet "PINs and Codes" in the device packaging.

**Note:**

If an incorrect code is entered, the code can only be entered again after a delay time. This time gets longer after each incorrect entry.

The message "Waiting for authentication" is displayed on the PC/notebook.

Connected

After connection, the sensor DTM appears.

If the connection is interrupted, e.g. due to a too large distance between sensor and operating device, this is displayed on the operating device. The message disappears when the connection is restored.

Change device code

Parameter adjustment of the device is only possible if the parameter protection is deactivated. When delivered, parameter protection is deactivated by default and can be activated at any time.

It is recommended to enter a personal 6-digit device code. To do this, go to menu "Extended functions", "Access protection", menu item "Protection of the parameter adjustment".

8.3 Parameter adjustment

Prerequisites

For parameter adjustment of the instrument via a Windows PC, the configuration software PACTware and a suitable instrument driver (DTM) according to FDT standard are required. The latest PACTware version as well as all available DTMs are compiled in a DTM Collection. The DTMs can also be integrated into other frame applications according to FDT standard.



Fig. 24: Example of a DTM view - Adjustment current output

9 Menu overview

Main menu

| Menu item | Code acc. to VDMA 24574-1 | Basic setting |
|--------------------|------------------------------|--------------------------|
| Zero 4 mA | ZEO | Measuring range begin |
| Span 20 mA | SPN | Measuring range end |
| Extended functions | EF | - |
| Diagnostics | DIA | - |

Extended functions

| Menu item | Code acc. to VDMA 24574-1 | Basic setting |
|------------------------------------|------------------------------|---------------|
| Damping | DAM | 0 s |
| Offset correction | OFS | - |
| Reaction when malfunctions occur | FER | ≤ 3.6 mA |
| Accept value 4 mA | LRV | - |
| Accept value 20 mA | URV | |
| Pressure unit | UNI | mbar |
| Unit temperature | TMP | °C |
| Bluetooth access code | BT | On |
| Protection of the parameterization | COD | Off |
| Reset | RES | - |

Diagnostics

| Menu item | Code acc. to VDMA 24574-1 | Basic setting |
|--------------------------------|------------------------------|---------------|
| Status | STA | - |
| Parameter modification counter | PCO | - |
| Min. value pointer function | LO | Last values |
| Max. value pointer function | HI | |
| Sensor information | INF, HW, SW | - |
| Simulation | SIM | - |

10 Diagnostics and servicing

10.1 Maintenance

Precaution measures against buildup

In some applications, product buildup on the diaphragm can influence the measuring result. Depending on the sensor and application, take precautions to ensure that heavy buildup, and especially a hardening thereof, is avoided.

Cleaning

The cleaning helps that the type label and markings on the instrument are visible.

Take note of the following:

- Use only cleaning agents which do not corrode the housings, type label and seals
- Use only cleaning methods corresponding to the housing protection rating

10.2 Rectify faults

Reaction when malfunction occurs

The operator of the system is responsible for taking suitable measures to rectify faults.

Causes of malfunction

The device offers maximum reliability. Nevertheless, faults can occur during operation. These may be caused by the following, e.g.:

- Sensor
- Process
- Voltage supply
- Signal processing

Fault rectification

The first measures are:

- Evaluation of fault messages
- Checking the output signal
- Treatment of measurement errors

A smartphone/tablet with the VEGA Tools app or a PC/notebook with the software PACTware and the suitable DTM offer you further comprehensive diagnostic possibilities. In many cases, the causes can be determined in this way and the faults eliminated.

Reaction after fault rectification

Depending on the reason for the fault and the measures taken, the steps described in chapter "Setup" must be carried out again or must be checked for plausibility and completeness.

24 hour service hotline

Should these measures not be successful, please call in urgent cases the VEGA service hotline under the phone no. **+49 1805 858550**.

The hotline is also available outside normal working hours, seven days a week around the clock.

Since we offer this service worldwide, the support is provided in English. The service itself is free of charge, the only costs involved are the normal call charges.

4 ... 20 mA signal

10.3 Diagnosis, fault messages

Connect a multimeter in the suitable measuring range according to the wiring plan. The following table describes possible errors in the current signal and helps to eliminate them:

| Error | Cause | Rectification |
|---|---|--|
| 4 ... 20 mA signal not stable | Fluctuating measured value | Set damping |
| 4 ... 20 mA signal missing | Electrical connection faulty | Check connection, correct, if necessary |
| | Voltage supply missing | Check cables for breaks; repair if necessary |
| | Operating voltage too low, load resistance too high | Check, adapt if necessary |
| Current signal greater than 22 mA, less than 3.6 mA | Sensor electronics defective | Replace device or send in for repair depending on device version |

10.4 Status messages according to NE 107

The instrument features self-monitoring and diagnostics according to NE 107 and VDI/VDE 2650. In addition to the status messages in the following tables there are more detailed error messages available under the menu item "Diagnostics" via the respective adjustment module.

Status messages

The status messages are divided into the following categories:

- Failure
- Function check
- Out of specification
- Maintenance requirement

and explained by pictographs:

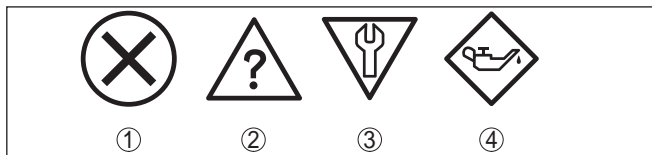


Fig. 25: Pictographs of the status messages

- 1 Failure - red
- 2 Out of specification - yellow
- 3 Function check - orange
- 4 Maintenance - blue

Failure: Due to a malfunction in the instrument, a fault message is output.

This status message is always active. It cannot be deactivated by the user.

Function check: The instrument is being worked on, the measured value is temporarily invalid (for example during simulation).

This status message is inactive by default.

Out of specification: The measured value is unreliable because an instrument specification was exceeded (e.g. electronics temperature).

This status message is inactive by default.

Maintenance: Due to external influences, the instrument function is limited. The measurement is affected, but the measured value is still valid. Plan in maintenance for the instrument because a failure is expected in the near future (e.g. due to buildup).

This status message is inactive by default.

Failure

| Code Text message | Cause | Rectification |
|---|---|--|
| F013 no measured value available | Hardware error in the area of the measuring cell | Send instrument for repair |
| F017 Adjustment span too small | Adjustment not within specification | Change adjustment |
| F036 no operable sensor software | Failed or interrupted software update | Repeat software update |
| F080 General software error | General software error | Restart |
| F110 Switching points too close together | Selected switching points too close together | Increase the distance between the switching points |
| F111 Switching points interchanged | Switching point 1 is smaller than switching point 2 | Increase switching point 1 to greater than switching point 2 |
| F260 Error in the calibration | Checksum error in the calibration values | Send instrument for repair |
| F261 Error in the instrument settings | Checksum error in the configuration values | Carry out a reset |

Function check

| Code Text message | Cause | Rectification |
|---------------------------|------------------------|--|
| C700 Simulation active | A simulation is active | Finish simulation Wait for the automatic end after 60 mins. |

Out of specification

| Code Text message | Cause | Rectification |
|---|---|---|
| S600 Impermissible electronics temperature | Temperature of the electronics in the non-specified range | Check ambient temperature Insulate electronics |

| Code Text message | Cause | Rectification |
|-------------------------------------|--|--|
| S604 Switching output overloaded | Overload or short circuit at output 1 or 2 | Electrical connection, check load resistance |

Maintenance

| Code Text message | Cause | Rectification |
|---|---|---------------------------------------|
| M504 Error at a device interface | Interference of the internal communication to Bluetooth | Restart Send instrument for repair |
| M510 No communication with the main controller | Fault in internal communication with the display | Restart Send instrument for repair |

10.5 Software update

The device software is updated via Bluetooth.

The following components are required:

- Instrument
- Voltage supply
- PC/notebook with PACTware/DTM and Bluetooth USB adapter
- Current instrument software as file

You can find the current instrument software as well as detailed information on the procedure in the download area of our homepage.



Caution:

Instruments with approvals can be bound to certain software versions. Therefore make sure that the approval is still effective after a software update is carried out.

You can find detailed information in the download area on our homepage.

10.6 How to proceed if a repair is necessary

You can find an instrument return form as well as detailed information about the procedure in the download area of our homepage. By doing this you help us carry out the repair quickly and without having to call back for needed information.

In case of repair, proceed as follows:

- Print and fill out one form per instrument
- Clean the instrument and pack it damage-proof
- Attach the completed form and, if need be, also a safety data sheet outside on the packaging
- Ask the agency serving you to get the address for the return shipment. You can find the agency on our homepage.

11 Dismount

11.1 Dismounting steps

**Warning:**

Before dismantling, be aware of dangerous process conditions such as e.g. pressure in the vessel or pipeline, high temperatures, corrosive or toxic media etc.

Take note of chapters "*Mounting*" and "*Connecting to voltage supply*" and carry out the listed steps in reverse order.

11.2 Disposal

The device is made of recyclable materials. For this reason, it should be disposed of by a specialist recycling company. Observe the applicable national regulations.

12 Certificates and approvals

12.1 Environmental instructions

Objective and measures

Protection of the environment is one of our most important duties. That is why we have introduced an environment management system with the goal of continuously improving company environmental protection. The environment management system is certified according to DIN EN ISO 14001.

Please help us fulfil this obligation by observing the environmental instructions in this manual:

- Chapter "*Packaging, transport and storage*"
- Chapter "*Disposal*"

13 Supplement

13.1 Technical data

Note for approved instruments

The technical data in the respective safety instructions which are included in delivery are valid for approved instruments (e.g. with Ex approval). These data can differ from the data listed herein, for example regarding the process conditions or the voltage supply.

All approval documents can be downloaded from our homepage.

Materials and weights

Materials, wetted parts

| | |
|---|----------------------------------|
| Process fitting | 316L |
| Diaphragm | |
| – Standard | 316L |
| – From measuring range 250 mbar | 316L, Elgiloy (2.4711) |
| Seal ring, O-ring | FKM (VP2/A), EPDM (A+P 70.10-02) |
| Seal for process fitting (in the scope of delivery) | |
| – Thread G½ (ISO 228-1) | FKM, EPDM |
| – Thread G1 (ISO 228-1) | FKM, EPDM |

Materials for applications in foodstuffs

Surface quality, hygienic fittings, typ.

- Process fitting $R_a < 0.8 \mu\text{m}$

Materials, non-wetted parts

| | |
|--|--|
| Electronics housing | 316L |
| Illuminated ring | PC |
| Internal transmission liquid piezoresistive measuring cell | Synthetic oil ²⁾ |
| M12 x 1 plug connector | |
| – Contact support | PBT/PC, 1.4404 |
| – Contacts | CuZn, nickel layer and 0.8 μm gold-plated |
| Plug connector according to ISO 4400 | |
| – Contact, housing plug | PBT/PC |
| – Housing connector plug | PA |
| – Lid screw | StSt |
| – Contact surface | German silver |
| – Plug seal | Silicone |
| Direct cable outlet | |
| – Cable enclosure | PBT/PC, 1.4404 |
| – Cable | PUR |
| Weight | approx. 0.25 kg (0.55 lbs) |

²⁾ Transmission liquid with measuring ranges up to 100 bar. With measuring ranges from 250 bar dry measuring cell.

Torques

Max. torque for process fitting (examples)

- Clamp 5/10 Nm (3.688/7.376 lbf ft)
- Varivent 20 Nm (14.75 lbf ft)
- Thread G $\frac{1}{2}$ (ISO 228-1), G $\frac{3}{4}$ 30 Nm (22.13 lbf ft)
(DIN 3852-E), M30 x 1.5, Ingold, NPT connections
- SMS, collar socket DIN 11851, 40 Nm (29.50 lbf ft)
DIN 11864-1, Form A
- Thread G $\frac{1}{2}$ (EN 837), G1 (ISO 228-1), 50 Nm (36.88 lbf ft)
G1 $\frac{1}{2}$ (DIN 3852-A)
- Thread G1 with conus 100 Nm (73.76 lbf ft)

Input variable

The specifications are only an overview and refer to the measuring cell. Limitations due to the material and version of the process fitting as well as the selected pressure type are possible. The specifications on the nameplate apply.³⁾

Nominal measuring ranges and overload capability in bar/kPa

| Nominal range | Overload capacity, max. pressure | Overload capacity, min. pressure |
|-----------------------------------|----------------------------------|----------------------------------|
| Gauge pressure | | |
| 0 ... +0.4 bar/0 ... +40 kPa | +4 bar/+400 kPa | -1 bar/-100 kPa |
| 0 ... +1 bar/0 ... +100 kPa | +4 bar/+400 kPa | -1 bar/-100 kPa |
| 0 ... +2.5 bar/0 ... +250 kPa | +10 bar/+1000 kPa | -1 bar/-100 kPa |
| 0 ... +5 bar/0 ... +500 kPa | +20 bar/+2000 kPa | -1 bar/-100 kPa |
| 0 ... +10 bar/0 ... +1000 kPa | +40 bar/+4000 kPa | -1 bar/-100 kPa |
| 0 ... +25 bar/0 ... +2500 kPa | +120 bar/+12 MPa | -1 bar/-100 kPa |
| 0 ... +60 bar/0 ... +6000 kPa | +300 bar/+30 MPa | -1 bar/-100 kPa |
| 0 ... +100 bar/0 ... +10 MPa | +300 bar/+30 MPa | -1 bar/-100 kPa |
| 0 ... +250 bar/0 ... +25 MPa | +500 bar/+50 MPa | -1 bar/-100 kPa |
| 0 ... +600 bar/0 ... +60 MPa | +1200 bar/+120 MPa | -1 bar/-100 kPa |
| 0 ... +1000 bar/0 ... +100 MPa | +2000 bar/+200 MPa | -1 bar/-100 kPa |
| -0.2 ... +0.2 bar/-20 ... +20 kPa | +4 bar/+400 kPa | -1 bar/-100 kPa |
| -0.5 ... +0.5 bar/-50 ... +50 kPa | +4 bar/+400 kPa | -1 bar/-100 kPa |
| -1 ... 0 bar/-100 ... 0 kPa | +4 bar/+400 kPa | -1 bar/-100 kPa |
| Absolute pressure | | |
| 0 ... 1 bar/0 ... 100 kPa | +4 bar/+400 kPa | 0 bar abs. |
| 0 ... 2.5 bar/0 ... 250 kPa | +10 bar/+1000 kPa | 0 bar abs. |
| 0 ... 5 bar/0 ... 500 kPa | +20 bar/+2000 kPa | 0 bar abs. |
| 0 ... 10 bar/0 ... 1000 kPa | +40 bar/+4000 kPa | 0 bar abs. |

³⁾ Data on overload capability apply for reference temperature.

| Nominal range | Overload capacity, max. pressure | Overload capacity, min. pressure |
|-----------------------------|----------------------------------|----------------------------------|
| 0 ... 25 bar/0 ... 2500 kPa | +120 bar/+12 MPa | 0 bar abs. |

Nominal measuring ranges and overload capacity in psi

| Nominal range | Overload capacity, max. pressure | Overload capacity, min. pressure |
|-------------------|----------------------------------|----------------------------------|
| Gauge pressure | | |
| 0 ... +5 psig | +60 psig | -14.5 psig |
| 0 ... +15 psig | +60 psig | -14.5 psig |
| 0 ... +30 psig | +145 psig | -14.5 psig |
| 0 ... +75 psig | +290 psig | -14.5 psig |
| 0 ... +150 psig | +580 psig | -14.5 psig |
| 0 ... +300 psig | +1740 psig | -14.5 psig |
| 0 ... +900 psig | +4350 psig | -14.5 psig |
| 0 ... +1450 psig | +4350 psig | -14.5 psig |
| 0 ... +3000 psig | +7250 psig | -14.5 psig |
| 0 ... +9000 psig | +17400 psig | -14.5 psig |
| 0 ... +15000 psig | +29000 psig | -14.5 psig |
| -3 ... +3 psig | +60 psig | -14.5 psig |
| -7 ... +7 psig | +60 psig | -14.5 psig |
| -14.5 ... 0 psig | +60 psig | -14.5 psig |
| Absolute pressure | | |
| 0 ... +15 psi | +43 psi | 0 psi |
| 0 ... +30 psi | +145 psi | 0 psi |
| 0 ... +75 psi | +290 psi | 0 psi |
| 0 ... +150 psi | +580 psi | 0 psi |
| 0 ... +300 psi | +1740 psi | 0 psi |

Adjustment ranges

Specifications refer to the nominal measuring range, pressure values lower than -1 bar cannot be set

Zero/Span adjustment:

- Zero -20 ... +95 %
- Span -120 ... +120 %

Maximum permissible Turn Down Unlimited (recommended 20 : 1)

Switch-on phase

Run-up time with operating voltage U_B ≤ 2 s
 Starting current for run-up time ≤ 3.6 mA

Output variable - two-wire 4 ... 20 mA

| | |
|--|--|
| Output signal | 4 ... 20 mA - passive |
| Connection technology | Two-wire |
| Range of the output signal | 3.8 ... 20.5 mA |
| Signal resolution | 5 μ A |
| Fault signal, current output (adjustable) | ≤ 3.6 mA, ≥ 21 mA, last measured value |
| Max. output current | 21.5 mA |
| Load | See load resistance under Power supply |
| Damping (63 % of the input variable), adjustable | 0 ... 999 s |
| Transferred measured value | Pressure |

Dynamic behaviour output

Dynamic characteristics - Current output⁴⁾

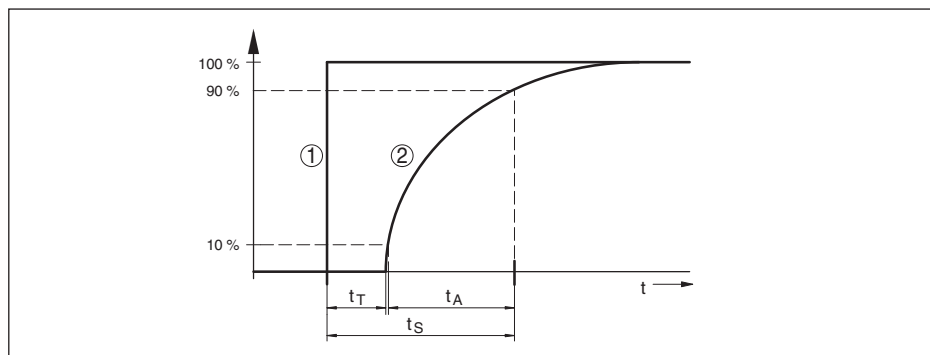


Fig. 26: Behaviour the current output in case of sudden change of the process variable. t_T : dead time; t_A : rise time; t_S : jump response time

- 1 Process variable
- 2 Output signal

| Size | Time |
|---|-------------|
| Dead time | ≤ 4 ms |
| Rise time (10 ... 90 %) | ≤ 2 ms |
| Step response time (ti: 0 s, 10 ... 90 %) | ≤ 4 ms |

Damping (63 % of the input variable) 0 ... 9 s, adjustable

Reference conditions and influencing variables (according to DIN EN 60770-1)

Reference conditions according to DIN EN 61298-1

| | |
|---------------------|--|
| – Temperature | +18 ... +30 °C (+64 ... +86 °F) |
| – Relative humidity | 45 ... 75 % |
| – Air pressure | 860 ... 1060 mbar/86 ... 106 kPa (12.5 ... 15.4 psi) |

⁴⁾ Depending on medium and temperature

| | |
|--|--|
| Determination of characteristics | Limit point adjustment according to IEC 61298-2 |
| Characteristic curve | Linear |
| Reference installation position | upright, diaphragm points downward |
| Influence of the installation position | $\leq 5 \text{ mbar}/0.5 \text{ kPa}$ (0.073 psig) |

Deviation (according to IEC 60770)

Applies to the 4 ... 20 mA current output and refers to the adjusted span. Turn down (TD) is the relation nominal measuring range/adjusted span.

| Accuracy class | Non-linearity, hysteresis and repeatability with TD 1 : 1 up to 5 : 1 | Non-linearity, hysteresis and repeatability with 5 : 1 |
|----------------|---|--|
| 0.3 % | $< 0.3 \%$ | $< 0.06 \% \times \text{TD}$ |

Influence of the medium or ambient temperature

Average temperature coefficient of the zero signal⁵⁾ $< 0.15 \%/10 \text{ K}$

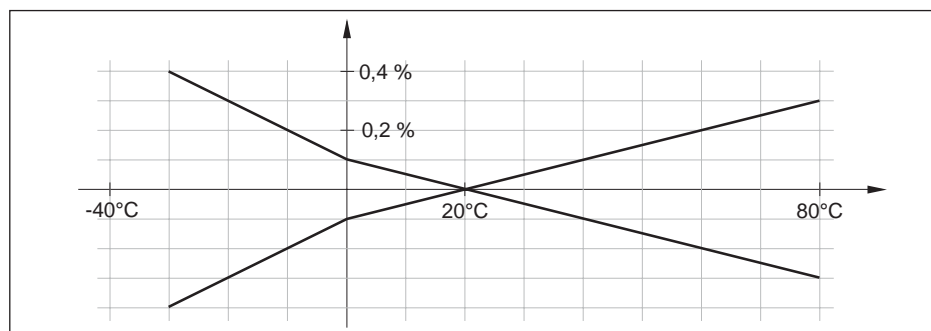


Fig. 27: Temperature error with TD 1 : 1

Long-term stability (according to DIN 16086)

Specifications refer to the set span. Turn down (TD) is the ratio: nominal measuring range/set span.

| Time period | Long-term drift zero signal and output span |
|-------------|---|
| One year | $< 0.1 \% \times \text{TD}$ |
| Two years | $< 0.15 \% \times \text{TD}$ |
| Five years | $< 0.2 \% \times \text{TD}$ |
| Ten years | $< 0.4 \% \times \text{TD}$ |

Ambient conditions

| | |
|-----------------------------------|----------------------------------|
| Ambient temperature | -40 ... +80 °C (-40 ... +176 °F) |
| Storage and transport temperature | -40 ... +80 °C (-40 ... +176 °F) |
| Relative humidity | 20 ... 85 % |

⁵⁾ In the compensated temperature range 0 ... +100 °C (+32 ... +212 °F).

Mechanical environmental conditions

| | |
|-------------------------------------|--|
| Sinusoidal vibrations | Class 4M8 acc. to IEC 60271-3-4 |
| Impacts | 50 g, 2.3 ms according to EN 60068-2-27 (mechanical shock) |
| Impact resistance | |
| – Plug according to ISO 4400 | IK07 acc. to IEC 62262 |
| – M12 x 1 plug, direct cable outlet | IK05 acc. to IEC 62262 |

Process conditions

Process temperature

Process temperature

- Standard seal -40 ... +130 °C (-40 ... +266 °F)
- Seal FKM (VP2/A) -20 ... +130 °C (-4 ... +266 °F)
- EPDM (A+P 70.10-02) -40 ... +130 °C (-40 ... +266 °F)

Temperature derating

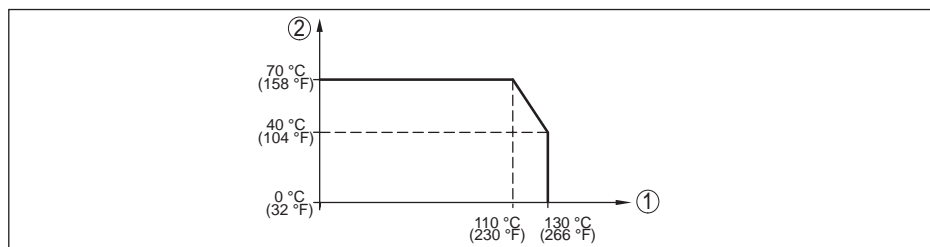


Fig. 28: Temperature derating VEGABAR 29

- 1 Process temperature
- 2 Ambient temperature

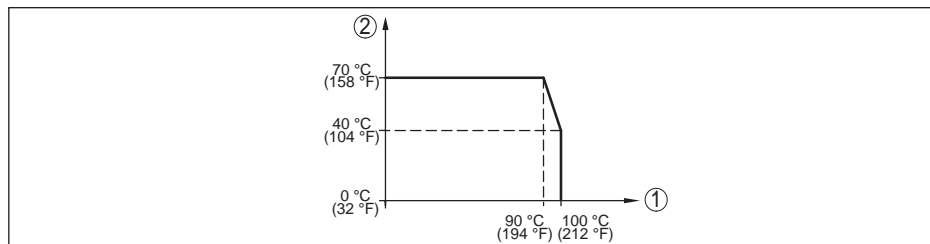


Fig. 29: Temperature derating VEGABAR 29 - with activated Bluetooth communication

- 1 Process temperature
- 2 Ambient temperature

SIP process temperature (SIP = Sterilization in place)

Vapour stratification for 1 h⁶⁾ +135 °C (+275 °F)

Process pressure

Permissible process pressure see specification "MWP" on the type label⁷⁾

⁶⁾ Instrument configuration suitable for vapour i.e. seal EPDM (A+P 70.10-02)

⁷⁾ MWP: Maximum Working Pressure

Adjustment

| | |
|-------------------|----------------|
| PC/Notebook | PACTware/DTM |
| Smartphone/Tablet | VEGA Tools app |

Electromechanical data

Angled plug connector

- Version 4-pin according to ISO 4400
- Cable gland M16 x 1.5 (for cable diameter 4.5 ... 7 mm)
- Screw terminals for cable cross-section up to 1.5 mm² (AWG 15)

Angle plug connector with flap lid

- Version 4-pin according to ISO 4400
- Cable gland M16 x 1.5 (for cable diameter 4.5 ... 11 mm)
- Screw terminals for cable cross-section up to 1.5 mm² (AWG 15)

Angled plug connector with IDC method of termination

- Version 4-pin according to ISO 4400
- Wire cross-section 0.5 ... 1 mm² (AWG 20... AWG 17)
- Strand diameter > 0.1 mm
- Wire diameter 1.6 ... 2 mm
- Outer cable diameter 5.5 ... 8 mm
- Connection frequency (on the same cross-section) 10 x

Round plug connector

4-pin with screw connection M12 x 1

Direct cable outlet

- Length 5 m (16.4 ft), 10 m (32.81 ft), 25 m (82.02 ft)
- Diameter two-wire approx. 6 mm
- Diameter three-wire approx. 8 mm
- Min. bending radius (at 25 °C/77 °F) 25 mm

Voltage supply

| | |
|---|---|
| Operating voltage U_B | 12 ... 35 V DC |
| Reverse voltage protection | Integrated |
| Permissible residual ripple | |
| – for U_N 12 V DC ($12 \text{ V} < U_B < 18 \text{ V}$) | $\leq 0.7 V_{\text{eff}}$ (16 ... 400 Hz) |
| – for U_N 24 V DC ($18 \text{ V} < U_B < 35 \text{ V}$) | $\leq 1.0 V_{\text{eff}}$ (16 ... 400 Hz) |

Load resistor

- Calculation $(U_B - U_{\text{min}})/0.022 \text{ A}$
- Example - for $U_B = 24 \text{ V DC}$ $(24 \text{ V} - 12 \text{ V})/0.022 \text{ A} = 545 \Omega$

Electrical protective measures

| | |
|----------------------|---|
| Potential separation | Electronics potential free up to 500 V AC |
| Protection rating | |

| Connection technology | Protection according to EN 60529/IEC 529 | Protection according to UL 50 |
|---------------------------------|--|-------------------------------|
| M12 x 1 plug | IP66/IP67/IP69 | Type 6P |
| Plug according to ISO 4400 | IP65 | Type 4X |
| ISO 4400 plug with hinged cover | | |
| Direct cable outlet | IP68 (0.5 bar)/IP69 | Type 6P |

| | |
|--------------------------|-------------------|
| Altitude above sea level | 5000 m (16404 ft) |
| Protection class | III |
| Pollution degree | 4 |

13.2 Dimensions

Connection technology

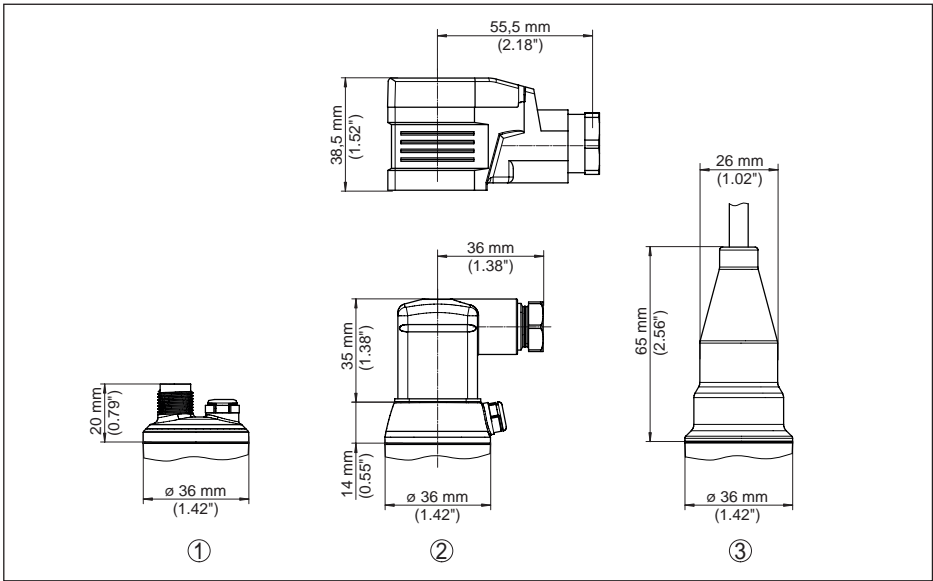


Fig. 30: Connection technology VEGABAR 29

- 1 M12 x 1 plug connector
- 2 Plug connector according to ISO 4400
- 3 Plug connector according to ISO 4400 with hinged cover
- 4 Direct cable outlet

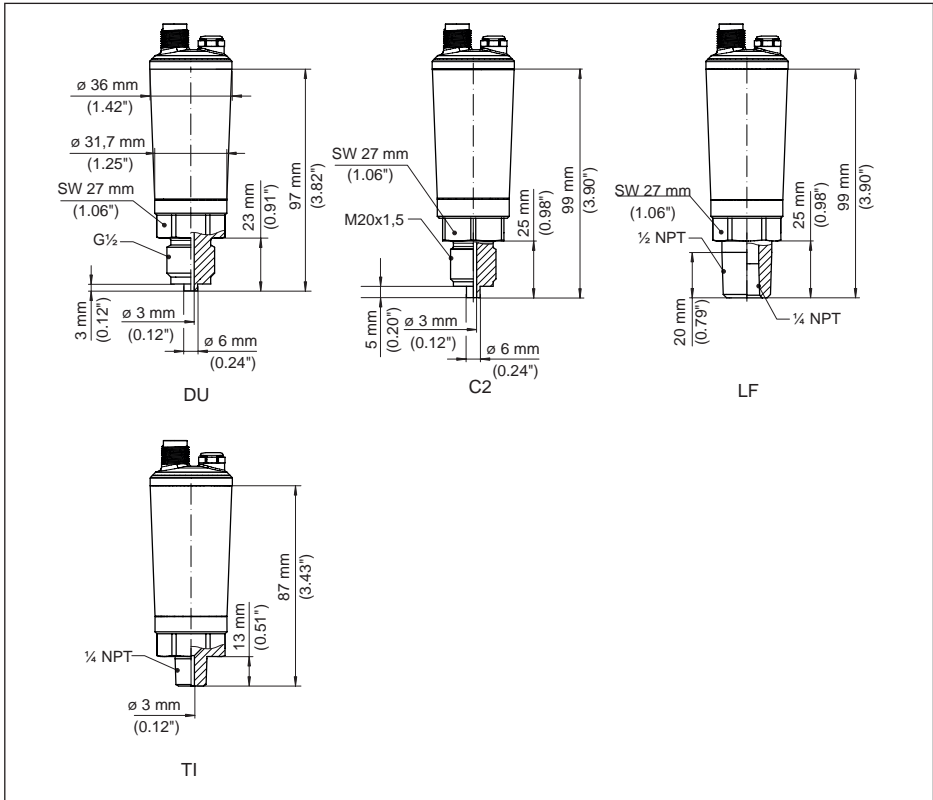
VEGABAR 29, threaded fitting not front-flush

Fig. 31: VEGABAR 29, threaded fitting not front-flush

DU Thread $G\frac{1}{2}$ (EN 837), manometer connection

C2 Thread M20 x 1.5 (EN 837), manometer connection

LF Thread $\frac{1}{2}$ NPT, inside $\frac{1}{4}$ NPT (ASME B1.20.1)TI Thread $\frac{1}{4}$ NPT (ASME B1.20.1)

VEGABAR 29, threaded fitting front-flush

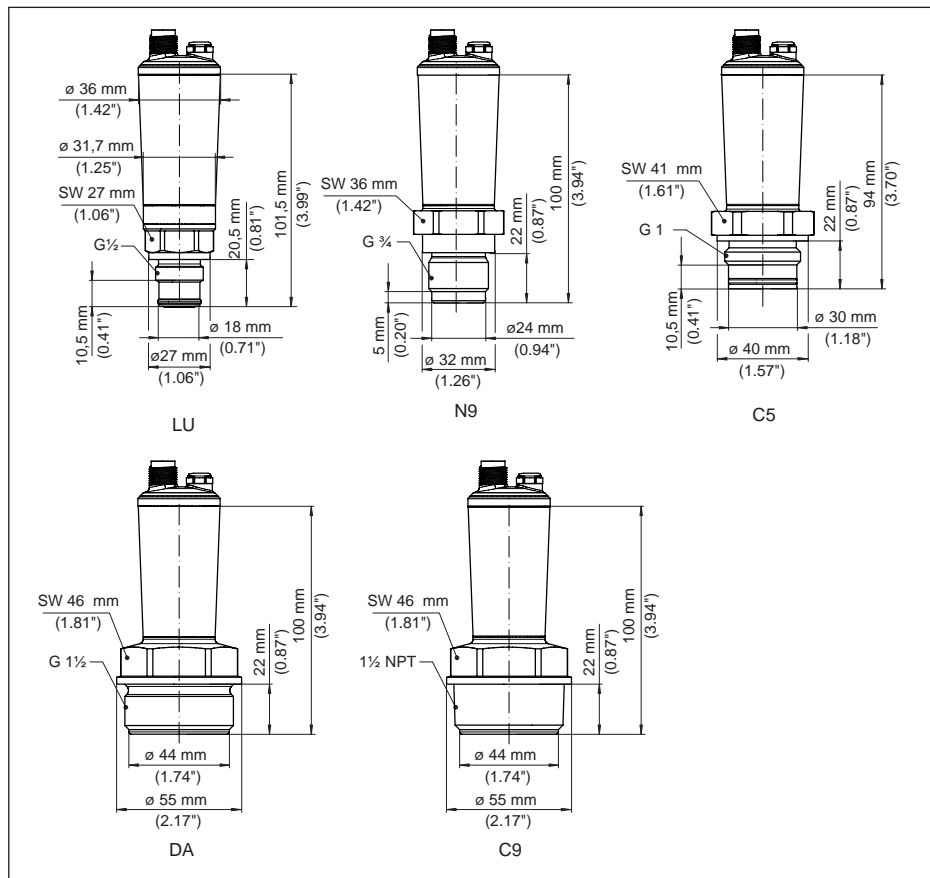


Fig. 32: VEGABAR 29, threaded fitting front-flush

LU Thread $G\frac{1}{2}$ (ISO 228-1)

N9 Thread $G\frac{3}{4}$ (DIN 3852-E)

C5 Thread $G 1$ (ISO 228-1)

DA Thread $G 1\frac{1}{2}$ (DIN 3852-A)

C9 Thread $1\frac{1}{2}$ NPT (ASME B1.20.1)


VEGABAR 29, threaded fitting front-flush with cone/extension

Fig. 33: VEGABAR 29, cone/extension fitting

DH Thread G1 (ISO 228-1), cone 40°

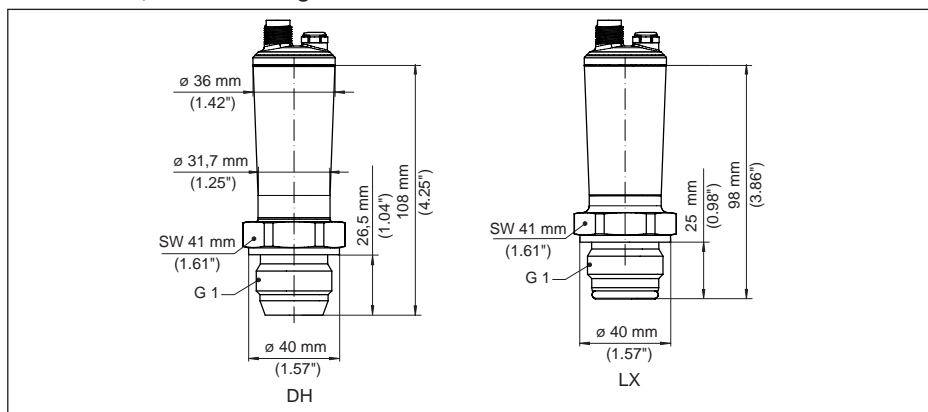LX Thread G1 (ISO 228-1), hygienic design

VEGABAR 29, hygienic fitting

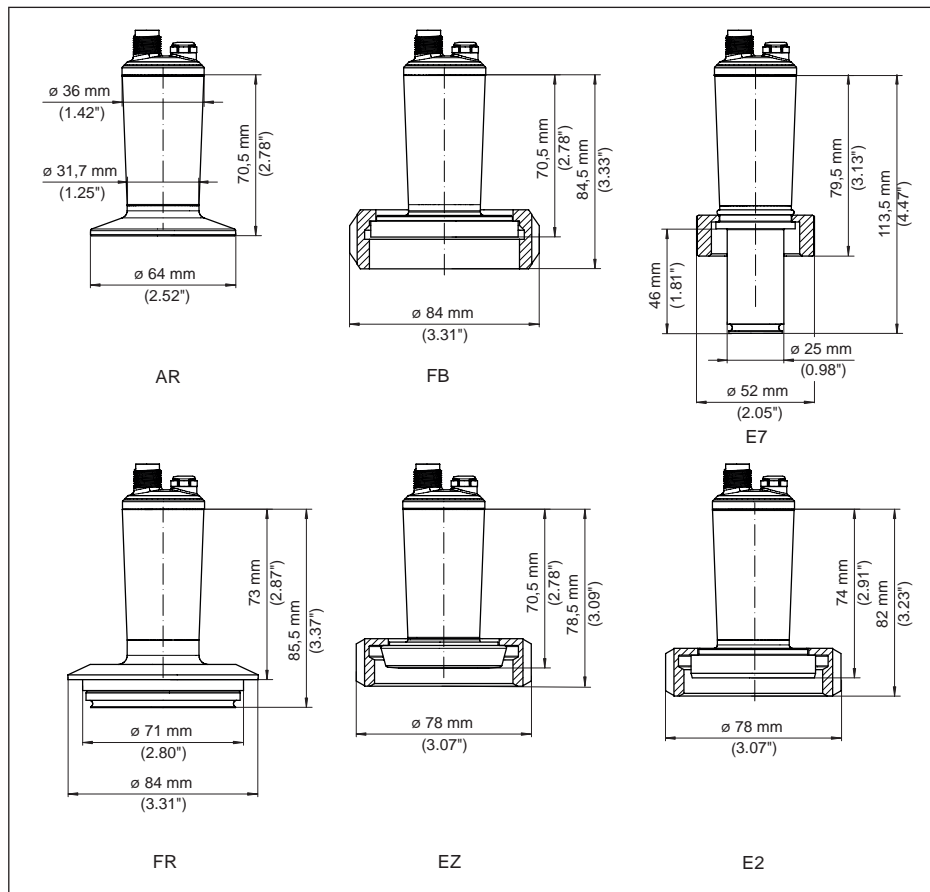


Fig. 34: VEGABAR 29, hygienic fitting

AR Clamp 2" PN 40, $\varnothing 64$ mm (DIN 32676, ISO 2852)

FB SMS DN51 PN6

E7 Ingold connection PN 10

FR Varivent N50-40 PN 25

EZ Collar socket DN 40 PN 40 (DIN 11851)

E2 Collar socket DN 40 PN 40 (DIN 11864-1, Form A)

13.3 Industrial property rights

VEGA product lines are global protected by industrial property rights. Further information see www.vega.com.

VEGA Produktfamilien sind weltweit geschützt durch gewerbliche Schutzrechte.

Nähere Informationen unter www.vega.com.

Les lignes de produits VEGA sont globalement protégées par des droits de propriété intellectuelle. Pour plus d'informations, on pourra se référer au site www.vega.com.

VEGA líneas de productos están protegidas por los derechos en el campo de la propiedad industrial. Para mayor información revise la pagina web www.vega.com.

Линии продукции фирмы ВЕГА защищаются по всему миру правами на интеллектуальную собственность. Дальнейшую информацию смотрите на сайте www.vega.com.

VEGA系列产品在全球享有知识产权保护。

进一步信息请参见网站www.vega.com。

13.4 Hash function acc. to mbed TLS

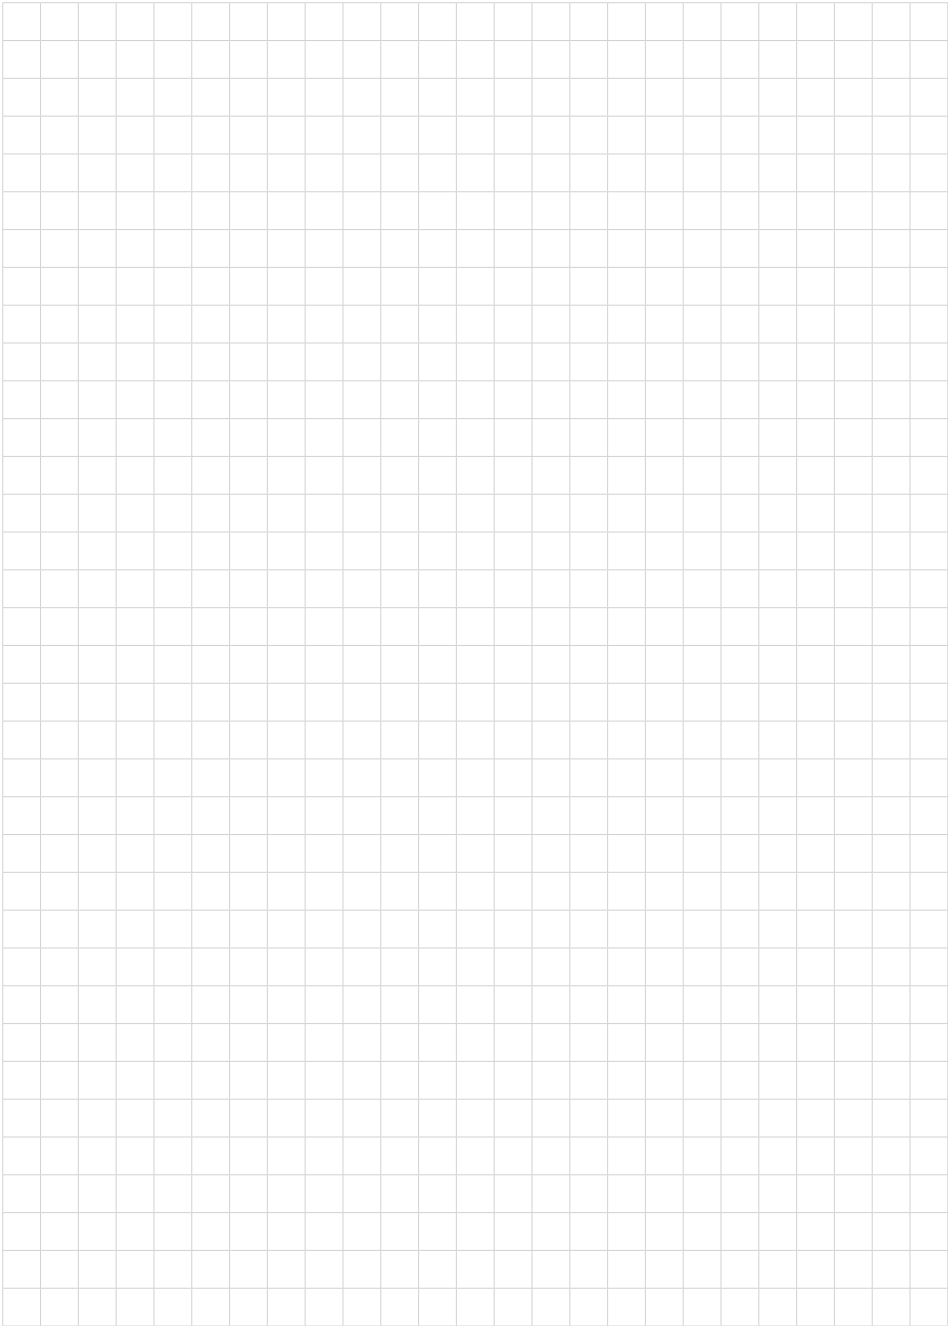
mbed TLS: Copyright (C) 2006-2015, ARM Limited, All Rights Reserved SPDX-License-Identifier: Apache-2.0

Licensed under the Apache License, Version 2.0 (the "License"); you may not use this file except in compliance with the License. You may obtain a copy of the License at <http://www.apache.org/licenses/LICENSE-2.0>.


Unless required by applicable law or agreed to in writing, software distributed under the License is distributed on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied. See the License for the specific language governing permissions and limitations under the License.

13.5 Trademark

All the brands as well as trade and company names used are property of their lawful proprietor/originator.



57087-EN-191014

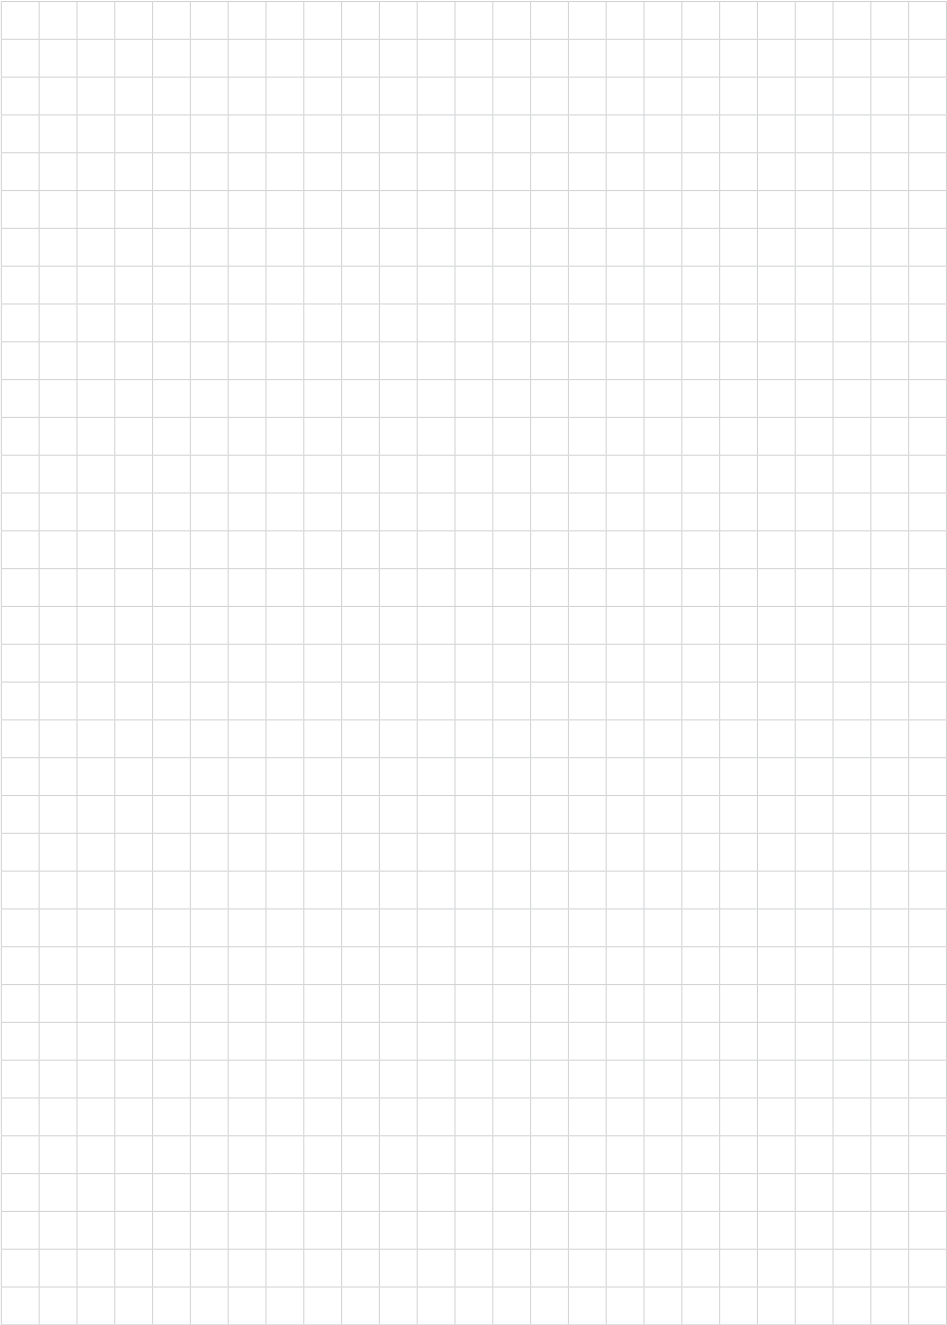

Printing date:

VEGA

All statements concerning scope of delivery, application, practical use and operating conditions of the sensors and processing systems correspond to the information available at the time of printing.

Subject to change without prior notice

© VEGA Grieshaber KG, Schiltach/Germany 2019



57087-EN-191014

VEGA Grieshaber KG
Am Hohenstein 113
77761 Schiltach
Germany

Phone +49 7836 50-0
Fax +49 7836 50-201
E-mail: info.de@vega.com
www.vega.com